



DURAFLAP INSTALL DIRECTIONS FOR FORD REAR DRILLESS MUDFLAPS 2004 to 2014, F-150 no Flares

Supplied hardware: 8- 1/4-20 x 1 1/4 Stainless Steel Black Oxide (SSBO) bolts; 8- 1/4" SSBO washers; 4- SS flange nuts; 4- 1/4-20 anodized u-clips; **2- aluminum flat clips #10001; 2 - Z brackets #10007**

Thread locker is suggested for all screws and bolts



NOTE: As you progress with the install, check for squareness and plumbness of the mud flap to the tire.

- Step 1: Un package your new rear mud flaps. Smooth side is rear side, tapered corner on top is outside top edge. If applicable, Stainless Steel weights face rearwards.
- Step 2: Attach the flat clip to the back (smooth) side of the mud flap at hole A. Slide the hex bolt thru a washer, thru the tire side of the mud flap (side with grooves), thru the flat clip with the bent edge toward the mud flap and secure it with a flange nut. Leave loose for now.
- Step 3: Remove factory screws or plastic push pins located at points (B and C).
- Step 4: Slide the U Clip over the fender fold at points (B and C) with the threaded side to the rear and align the factory hole with the threaded U Clip.
- Step 5: Remove factory bolt on fender strut located at position (E) in picture and install one end of the "Z" bracket by re-installing the factory bolt. Leave slightly loose.
- Step 6: Place the mud flap into the fender well and match up the pre drilled hole in the flap with the factory hole in the truck fender at point (B). Attach with 1/4-20 bolt with washer. Leave loose for now.
- Step 7: Repeat step 6 at point (C).
- Step 8: Attach the other end of the "Z" bracket to the mud flap at the pre-drilled hole at point (D) with a 1/4-20 bolt, washer and flange nut.
- Step 9: Slip the bottom longer end of the "FLAT CLIP" over the edge of the fender fold at point (A), and tighten causing the clip to grip the sheet metal firmly.
- Step 10: Align and center the mud flap to the tire, then tighten all bolts .

NOTE: Recheck every three months and retighten bolts if necessary.


IF YOU HAVE ANY QUESTIONS OR CONCERNS PLEASE GIVE US A CALL AT 541-245-9148

ADD MOISTURE A COUPLE TIMES A YEAR WITH FURNITURE POLISH OR VINYL PROTECTOR

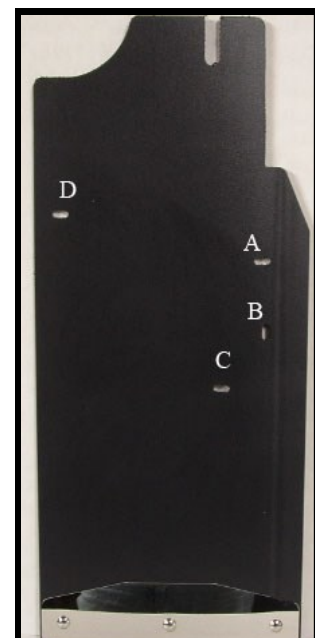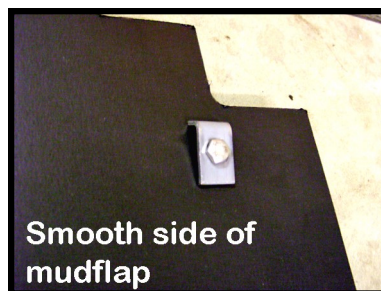

FR12 150 NF, FR12L 150 NF, FR14 150 NF, FR14L 150 NF,
FR12 11 150 NF, FR14 11 150 NF

2- aluminum flat clips #10001; 2 - Z brackets #10007

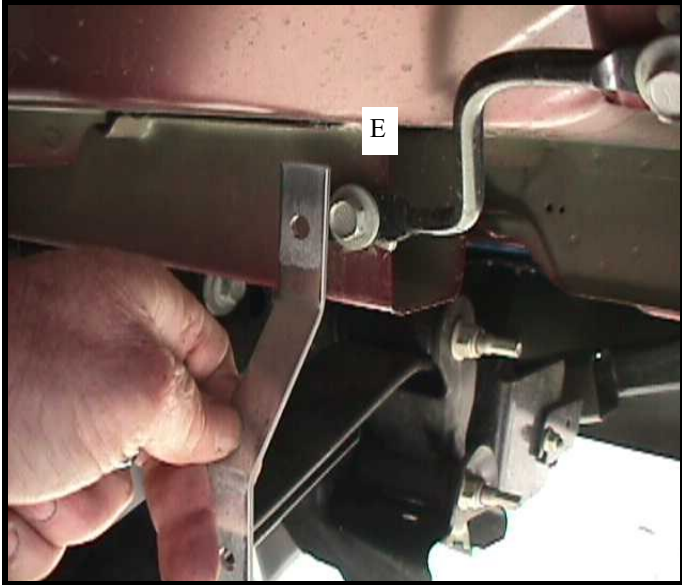

FR12 150 NF, FR12L 150 NF, FR14 150 NF, FR14L 150 NF,
FR12 11 150 NF, FR14 11 150 NF

2- aluminum flat clips #10001; 2 - Z brackets #10007