


**Included Parts:**

- (12) #14 x 1" (SSBO) Slotted hex screws
- (12) 1/4" (SSBO) washers
- (2) Rear mud flaps

**Installation Steps:**

1. PARK VEHICLE ON LEVEL WORK AREA.
2. Unpack and verify all parts are included per list above. **If anything is missing, please call DuraFlap at the number below.**
3. Remove the 6 factory screws and splash guard if installed. Align the holes in flap to the factory holes and secure the flap with the provided screws and washers.

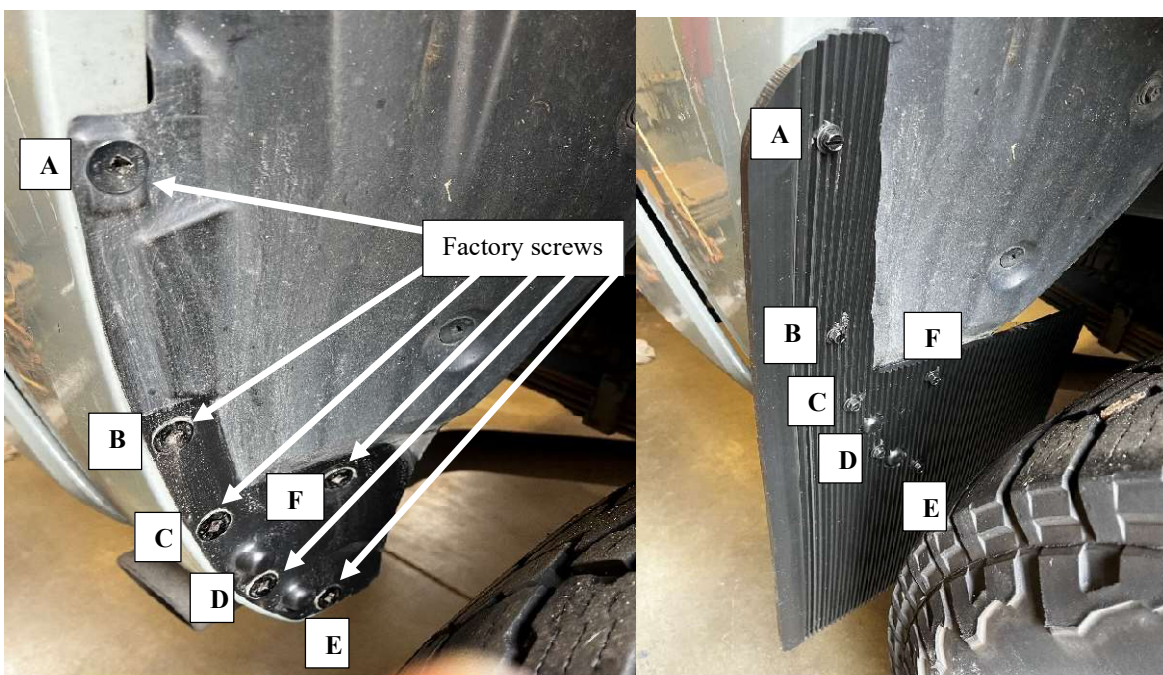

**NOTE: Check bolts and screws for tightness every two months.**

**If you have any questions, give us a call. (541) 245-9148**