



Chevy/GMC Colorado and Canyon 2015 - 2022 Rear Install Directions

NOTE: Park on level surface for installation. As you progress with the install, check that the mudflap remains square and plumb to the tire.



Included hardware:

*2- 1/4-20x1" stainless steel black oxide (SSBO) bolts; 2 1/4-20x1 1/4 (SSBO) bolts; 4- (SSBO) 1/4 larger inner diameter washers; 2-(SS) 1/4 washers; 2 -(SS) Nylok Nuts; 2-(SS) Flange Nuts; 2- (SSBO) #10 washers; 2- #8 x 1.125 (SSBO) screws; 2 - small u-clips just in case; **2- Flat clips #10001.***

- Step 1:** Remove mudflaps from package. Smooth side faces rear, tapered corner on top is outside top edge. If applicable, Stainless Steel weights face rear.
- Step 2:** Attach the flat clip to the back (smooth) side of the mudflap at Point A. Slide the 1/4-20 x 1 1/4 (SSBO) hex bolt thru the (SSBO) larger inner diameter washer, thru the tire side of the mudflap (side with grooves), thru the flat clip with the bent edge toward the mudflap and secure it with the (SS) flange nut.
- Step 3:** If in place, remove the splash guard. When removing the screws at points B and C, be careful not to break the u-clip behind the liner.
- Step 4:** Align the pre-drilled hole in the mudflap with the factory hole B and thread the factory screw and washer thru the mudflap and into the factory hole and u-clip. Leave slightly loose.
- Note:** If needed, longer screws have been supplied. If you break a u-clip there are replacement u-clips included in the hardware.
- Step 5:** Repeat step 4 at Hole C.
- Step 6:** Slip the longer end of the "FLAT CLIP" over the edge of the fender well lip, and tighten causing the clip to grip the fender firmly at Point A.
- Step 7:** Thread the 1/4-20x 1" (SSBO) bolt thru the (SSBO) washer, thru the mudflap, and into the factory hole at point D. Secure it with the (SS) Washer and Nylok Nut. Leave slightly loose.
- Step 8:** Check alignment and tighten all screws and bolts.

Note: Re-check every three months and retighten if necessary.

IF YOU HAVE ANY QUESTIONS OR CONCERNS PLEASE GIVE US A CALL AT 541-245-9148

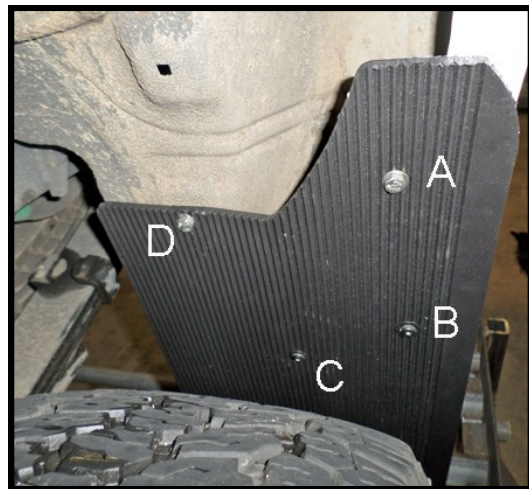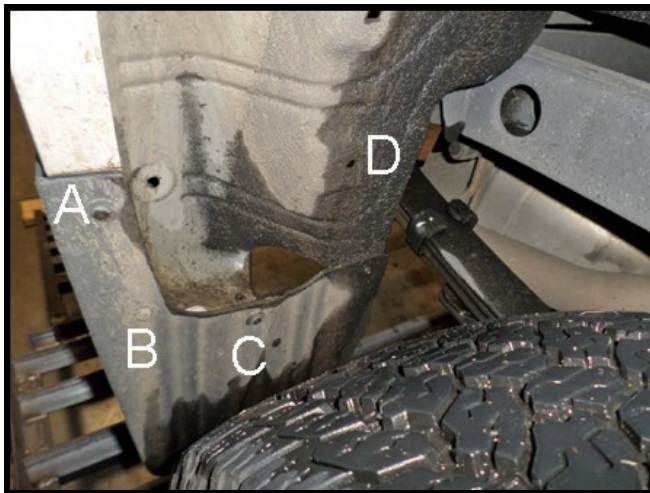



Bolt from behind



Flat clips #10001