



DURAFLAP INSTALL DIRECTIONS FOR 2015-2020 Tahoe/Suburban/Yukon Front



Included supplies: 2- 1/4-20x1"Stainless Steel Black Oxide (SSBO) Hex Bolts; 2- 1/4-20x1.25"(SSBO) Hex Bolts; 4- 1/4" SS Washers; 2- (SS) Flange Nuts; **2- Plastic Spacers #10048; 2- Flat Clips #10001.** Thread locker should be used on any fasteners that are not nylok

- Step 1: Un package your new front mud flaps. Smooth side is rear side. If applicable, Stainless Steel weights facing the rear of the truck.
- Step 2: Attach the flat clip to the front (smooth) side of the mud flap at Point C, with the 1/4-20x1.25 hex bolt going thru the washer, flat clip, mud flap; then secure with flange nut as shown on rear side of install directions. Leave the flange nut loose for now.
- Step 3: Remove factory screws at points "**B and D**". Set these aside, you will be reusing them. The factory faceplate is removed permanently.
- Step 4: Attach the plastic spacer in the fender well at point "**D**" with the extra hole in the spacer positioned above the indented slot, use the factory screw you removed to attach the spacer.
- Step 5: Place the mud flap with the smooth side to the rear and the textured side towards the tire, and secure with the supplied 1/4-20x1" bolt and washer going through the mud flap and into the spacer at point "**A**". (See picture on back). Leave slightly loose for now.
- Step 6: Place the second factory screw thru the mud flap at point "**B**" and into the lower factory hole. Leave slightly loose for now.
- Step 7: Slip the top longer end of the "FLAT CLIP" over the lower edge of the fender liner, at Point "**C**" and tighten causing the clip to grip the fender liner firmly. See picture on back.
- Step 8: Align the mud flap to be plumb vertically and tighten all the screws and bolts.

Note: Recheck bolts and screws every three months and retighten as necessary.


To keep your mud flaps looking like new replace the moisture that the mud takes away with a leather or vinyl moisturizer, or inexpensive furniture polish at least twice a year.

If you have any questions, please phone us at (541) 245-9148.

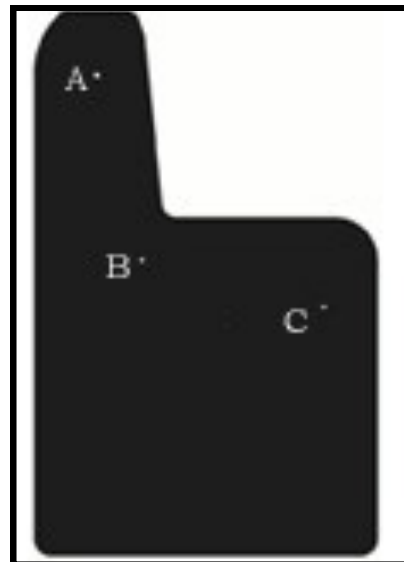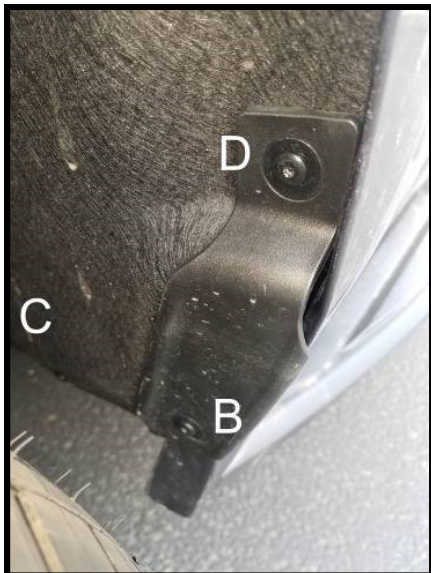

CF12 15 SUB, CF12 15 Tahoe

2- Plastic Spacers #10048; 2- Flat Clips #10001

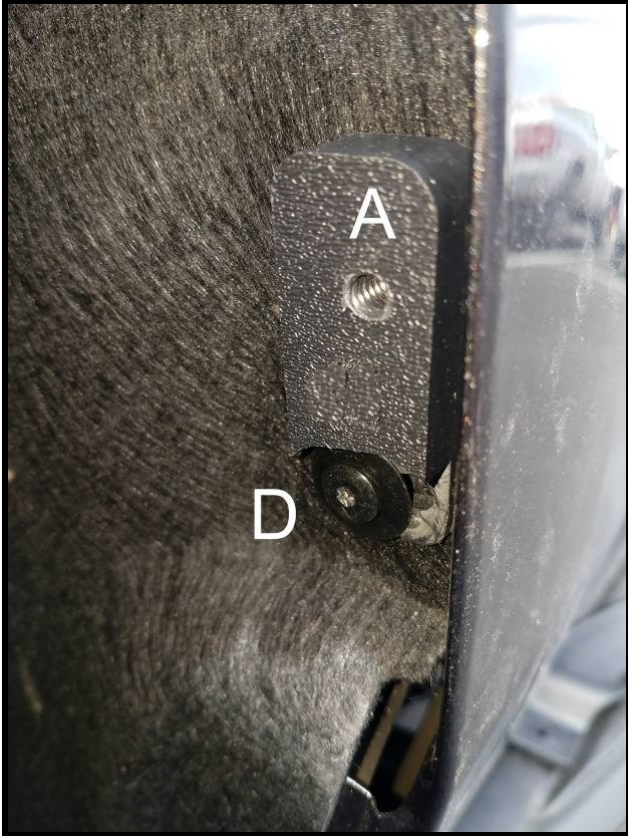

CF12 15 SUB, CF12 15 Tahoe **2- Plastic Spacers #10048; 2- Flat Clips #10001**