



DURAFLAP INSTALL DIRECTIONS FOR Dodge 4500 FRONT Drill-less MUDFLAPS 2019-current

Included supplies: 4- 1/4-20x3/4" Stainless steel black oxide (SSBO) Hex Bolts; 6 - 1/4-20X1" (SSBO) Hex Bolts; 14- (SSBO) 1/4 Washers; 4- (SS) 1/4 Washers 4- (SS) 6 mm Nylok Nuts; 2- (SS) Flange Nuts; 4- (SSBO) Nylok Nuts;

2-Plastic Spacers #10029 & 10030 ; 2- 4500 Brackets #10031; 2- Aluminum Flat Clips #10001

Thread locker is suggested for bolts going into flange nuts and plastic spacers

- Step 1: Unpack your new front mud flaps. Smooth side is rear side. If applicable, Stainless Steel weights facing the rear of the truck.
- Step 2: Remove factory screws with a 8 mm socket located at points "A and B". Set them aside, you will be reusing them.
- Step 3: Attach the plastic spacer in the fender well at points "A and B", using the factory screws.
- Step 4: Attach the 4500 Bracket to the 2 bolts underneath the door panel (**Do not remove the existing factory nuts**) utilizing the supplied 1/4" SS washers and 6 mm nylok nuts at points "F and G" as shown in the image on the back.
- Step 5: Attach the Flat Clip to the back (smooth side) of the mud flap at Point "E" with the SSBO 1/4-20 x 1" hex bolt going thru the SSBO washer and thru the grooved side of the mud flap. Attach the flat clip with the bend facing the mud flap and secure it with the supplied SS Flange Nut. Leave it loose for now. (See the photos on the back)
- Step 6: Place the mud flap with the smooth side to the rear and the textured side toward the tire, and start the first 1" bolt the thru a SSBO washer, the upper hole "C" of the mud flap, and into the threaded hole in the plastic spacer. Leave slightly loose for now.
- Step 7: Repeat step #6 for hole, "D". Leave slightly loose for now.
- Step 8: Align the long (bent) end of the flat clip to grab the fender well liner. Leave it slightly loose for now.
- Step 9: Insert the 1/4-20 x 3/4" bolt thru a SSBO washer, then the mud flap at point "H" and thru the 4500 Bracket. Secure with SSBO washer and Nylok Nut. Leave slightly loose for now.
- Step 10: Repeat step 9 at point "I".
- Step 11: Align the mud flap to be plumb vertically along the tires and tighten all the bolts.



Note: Recheck bolts and screws every three months and retighten as necessary.
Apply moisture to the mud flaps every 6 months in the form of furniture polish, Vinyl treatment or leather treatment.

If you have any questions, please phone us at (541) 245-9148.



DF12 19 4500, DF12L 19 4500, DF14 19 4500, DF14L 19 4500

2-Plastic Spacers #10029 & 10030 ; 2- 4500 Brackets #10031; 2- Aluminum Flat Clips #10001

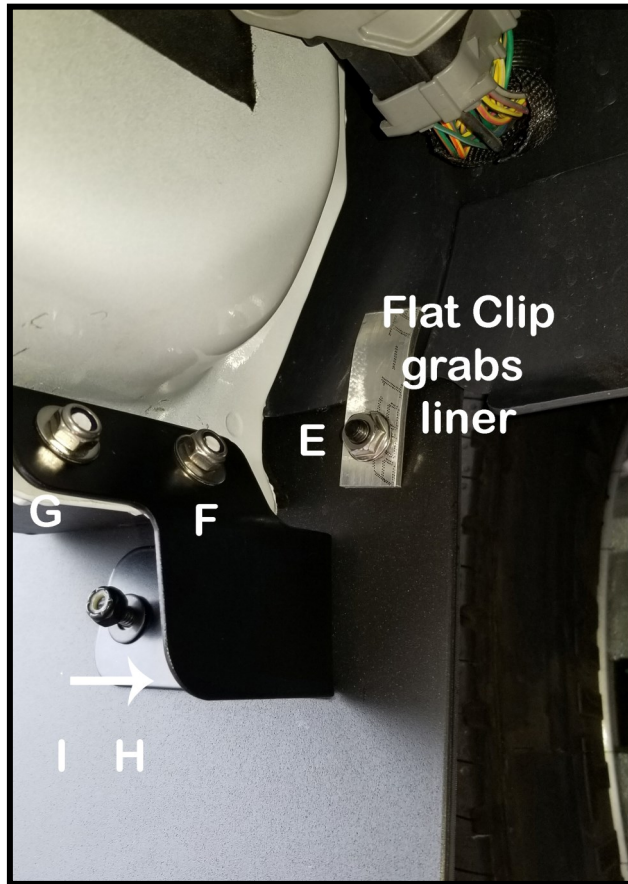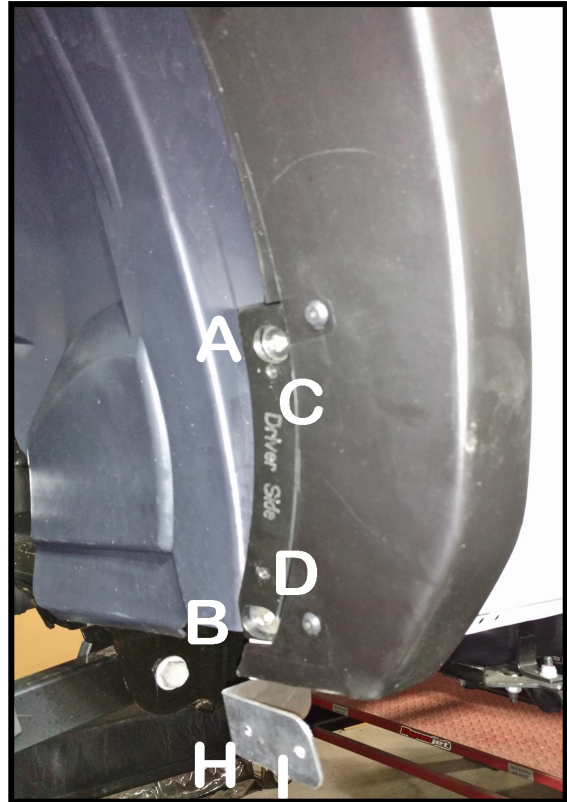

DF12 19 4500, DF12L 19 4500, DF14 19 4500, DF14L 19 4500
2-Plastic Spacers #10029 & 10030 ; 2- 4500 Brackets #10031; 2- Aluminum Flat Clips #10001