



## 2019 - Current Dodge Ram 1500 Front Drill-less Mud flap Installation

### Supplied Hardware:

2- Stainless Steel Black Oxide (SSBO) 1/4-20 x 1" bolts; 2- (SSBO) 1/4" washers; 2- (SS) Flange Nuts;  
2- Flat Clips #10001

**If you have aftermarket flares let DuraFlap know when ordering.**

*As you progress with the install, check that the mud flap remains square and plumb to the tire.*

**Step 1:** Unpack your new mud flaps. Smooth side faces to the rear, grooved side faces the tire. If applicable, Stainless Steel weights face to the rear.

**Step 2:** Remove your factory splash guards or the factory screws located at points (A), (B) and (C). Save the hardware to reinstall with your new mud flaps

**Step 3:** **Carefully** remove the plastic push pin and reinstall it after the splash guard has been removed. This will hold the factory trim piece in place.

NOTE: Some of the splash guards will have double sided tape holding the guard to the truck. Carefully separate the splash guard from the fender well.

**Step 4:** Place the mud flap into the fender well and slide the tab (See picture on back) into the open side slot of the factory trim piece. Adjust the flap into place by lining up the holes in the mud flap with the factory holes and reinstall the factory screws at holes A,B and C.

It may take some finesse to fit the mud flap in place. See picture below.




**Step 5:** Attach the flat clip to the back smooth side of the mud flap at Point D. Use the provided hex bolt and washer. Push the Hex bolt through the washer and then through the flap. Slide the flat clip onto the bolt on the back of the flap and align the bent part of the clip facing up onto the liner (See picture on the back) and secure with a flange nut.

**Step 6:** Recheck alignment and tighten all screws and bolts .

NOTE: Recheck every three months and retighten if necessary.

Apply moisture such as furniture polish or vinyl treatment twice a year.

**IF YOU HAVE ANY QUESTIONS OR CONCERNS PLEASE GIVE US A CALL AT (541) 245-9148**

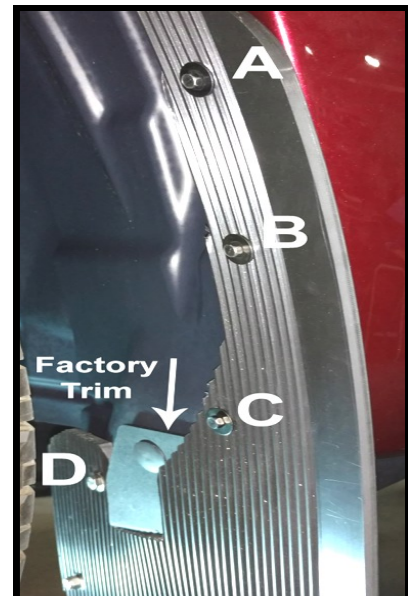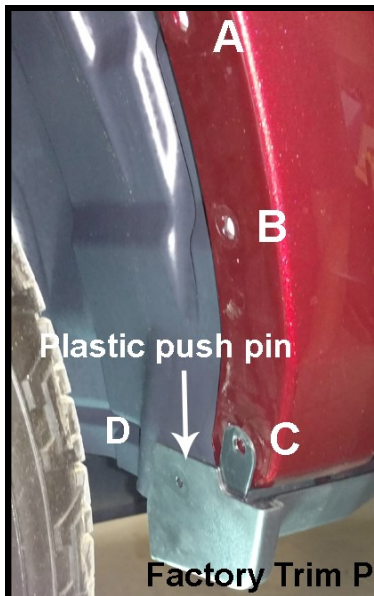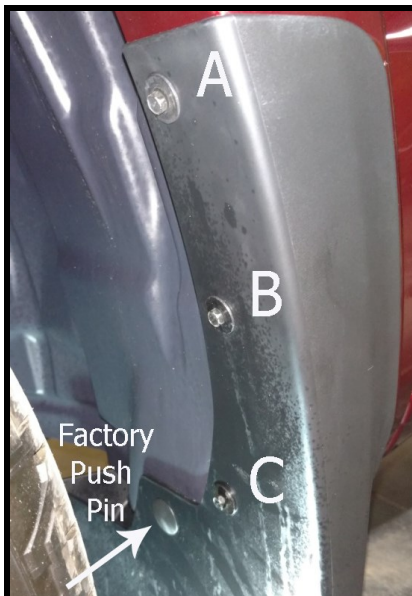

DF12 19 1500 , DF14 19 1500 , DF12 19 1500 Plus , DF14 19 1500 Plus

