



Chevy Colorado 2023 - Current Rear Install Directions

NOTE: Park on level surface for installation. As you progress with the install, check that the mudflap remains square and plumb to the tire.

Included hardware:

8- #8 x 1.125 (SSBO) screws; 8- (SSBO) #10 washers; 2 - small u-clips just in case;
2- Flat clips #10016.

Step 1: Remove mud flaps from package. Smooth side faces rear, tapered corner on top is outside top edge. Rain grooves face the tire.

Step 2: Attach the flat clip to the back (smooth) side of the mudflap at Point A. Use a #8 x 1.25 (SSBO) screw thru the (SSBO) #10 washer, thru the tire side of the mudflap (side with grooves), into the U-clip. Leave loose for now. See picture on the back.

Note: If in place, remove the factory splash guard.

Step 3: Remove screws at points B, C and D, be careful not to break the u-clips on the liner.

Note: If needed, longer screws have been supplied. If you break a u-clip there are replacement u-clips included in the hardware.

Step 4: Align hole B in the mud flap with the factory hole B and secure with the factory screw and washer. Leave slightly loose.


Step 5: Repeat step 4 at Hole C & D.

Step 6: Slide the "FLAT CLIP" under the edge of the fender well lip, and tighten causing the clip to grip the fender well firmly at Point A.


Step 7: Check alignment and tighten all screws and bolts.

Note: Re-check every three months and retighten if necessary.

IF YOU HAVE ANY QUESTIONS OR CONCERNS PLEASE GIVE US A CALL AT 541-245-9148

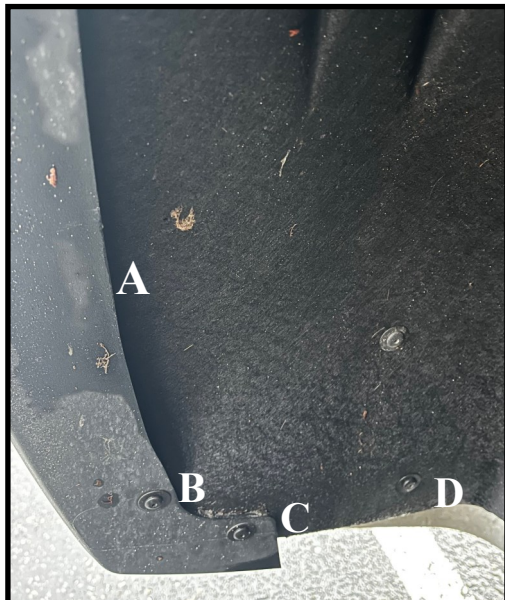

CCR 12 23; CCR 14 23

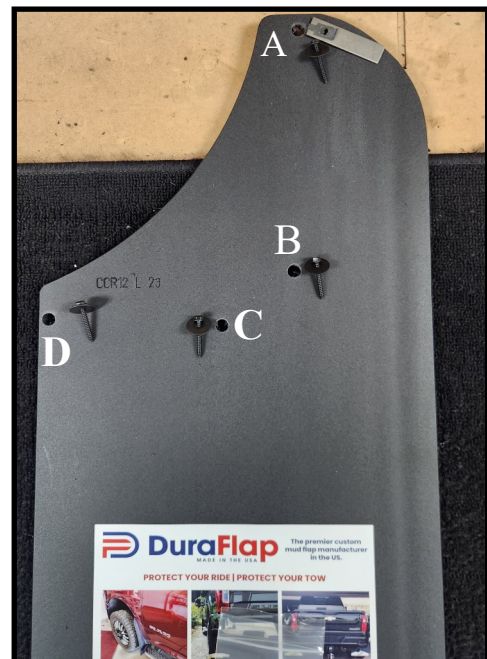

2- Flat clips #10016

