

Included Parts:

- (6) #8 x 1 1/4" (SSBO) screws
- (6) #10 x 3/4 (SSBO) washers
- (4) #8 u-clips
- (2) 10016 flat clips (with u-clips installed)
- (2) Front mud flaps


Installation Steps:

Threadlocker is recommended for all screws and bolts


1. PARK VEHICLE ON LEVEL WORK AREA.
2. Unpack and verify all parts are included per list above. ***If anything is missing, please call DuraFlap at the number below.***
3. Completely remove the 3 factory push pins (A, B & C).



4. Pull the fabric liner away slightly and install #8 u-clips at A & B (smooth side towards the felt).

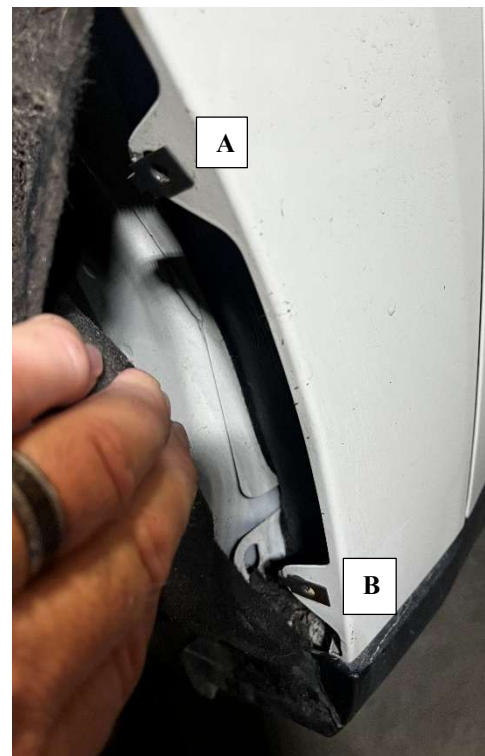

- Slide 10016 flat clip (smooth side towards the trim) behind plastic trim and temporarily align hole with #8 screw at C.

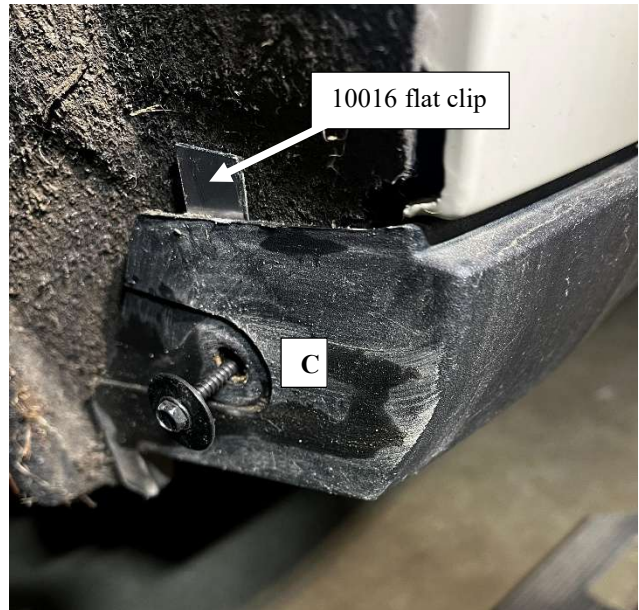

- Align the holes in flap to the factory holes and secure finger tight with the provided screws and washers.
- Align the mud flap to be plumb, then tighten screws.

NOTE: Check bolts and screws for tightness every two months.

If you have any questions, give us a call. (541) 245-9148