

To measure for your mudflap:

- 1.** Park on level ground and set your motorhome ride height for driving.
- 2.** Measure from the lowest point on the coach (usually the hitch) to the ground . Subtract 6 inches. This will give 2" between the hitch and mud flap (required for swing clearance) and 4" between the mud flap and the ground. This is the minimum clearance that we recommend. From this measurement we can calculate what size weight you can have.

If you want the same 2" clearance from the bottom of the vallance then we will also get that measurement to calculate the cutout needed to fit around the hitch. (see below)

- 3.** Be aware of other obstacles that may hit the mud flap like exhaust, electrical plugs or air line connections. We will want to get these measurements also so we can add cut-outs around the obstacles. You will not want your mud flap to hang behind the exhaust pipe as the rubber can melt. Average mud flaps are 95" across and 10 - 12" tall. The average cut out is 2-3" deep and 36 - 46" across.

To measure for a cutout:


Find the center of your coach. **Measure from one eye bolt (or hanging location) to the other.** These hanging points will be equal distance from the center. Add 1.5" to this dimension and this will be the Cutout Width – Bottom. We typically add 2-4" to the bottom dimension to get the Cutout Width – Top number.

Our hanging bracket is pre-drilled with mounting holes every 2" to allow you to adjust hanging points or move the mud flap to a new coach in the future.

Samples of custom cut-outs




Use this form to measure the layout of your mud flap.

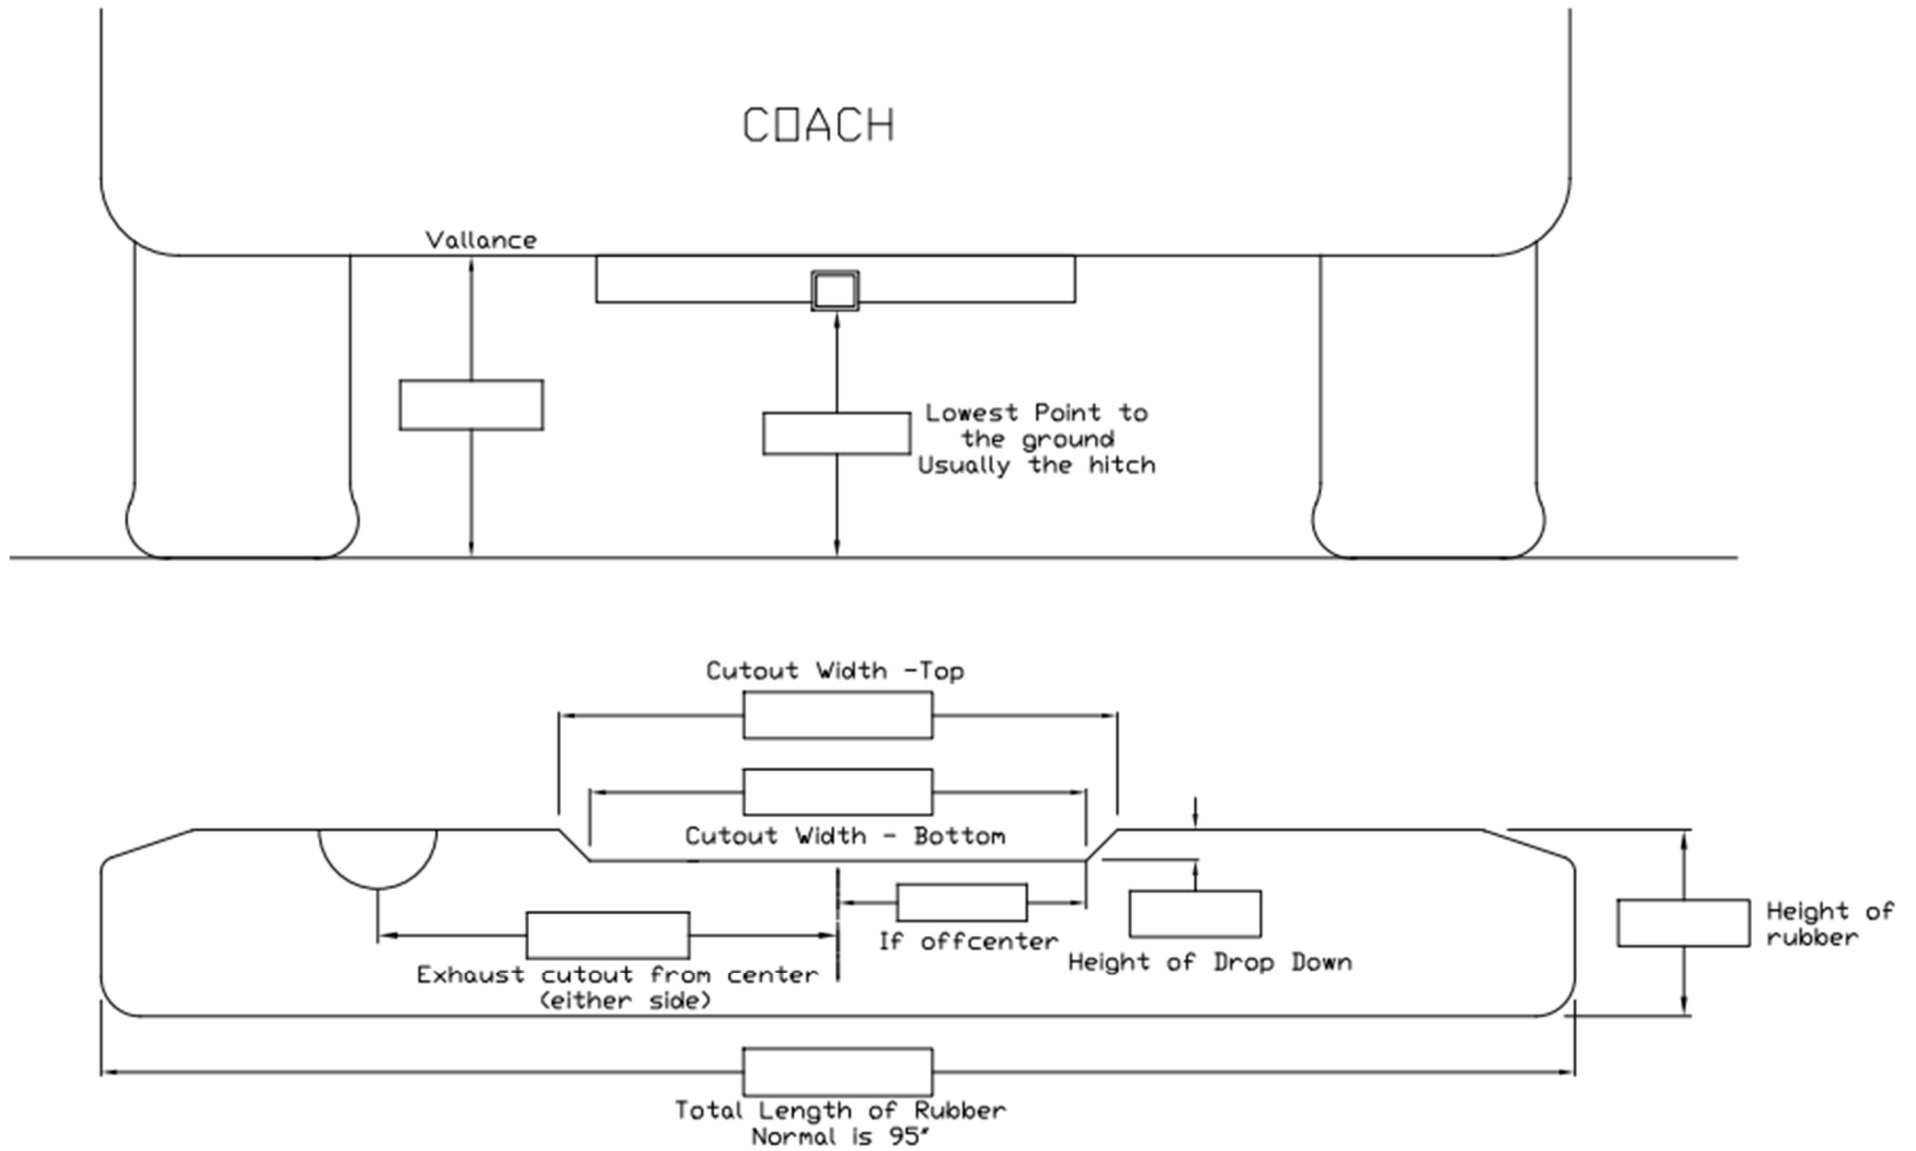

SOME EXAMPLES OF HANGING LOCATION POINTS:

ALFA hanging point

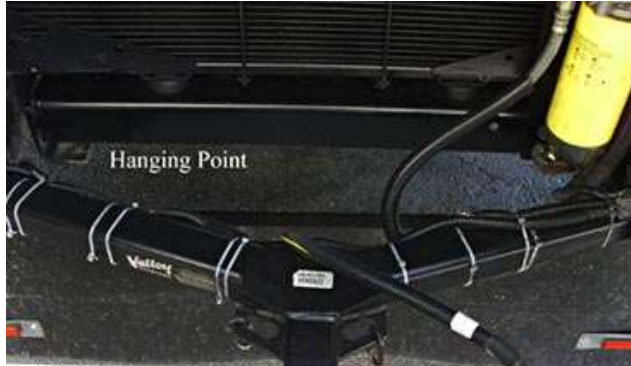

ALFA

Allegros hanging point



Holiday Rambler hanging point



HOLIDAY RAMBLER

Monaco hanging point



Pace Arrow hanging point



Typical Hanger



Customer Service and Returns

DuraFlap motor home products carry a 30-day money back guarantee against factory defects. Due to the nature of the motor home mud flaps the warranty ends after 30 days. All returns must have a return authorization number. Please call for a return authorization number.

The customer is responsible for measuring and obtaining the correct size specifications.

Please call us at DuraFlap for assistance with measuring. (541) 245-9148

How to measure your Motorhome Mudflap 10/22